


Windmill-Parts.com  
940 597-7735

Windmill-Parts.com  
940 597-7735

## Eclipse Standard Pumping Windmills

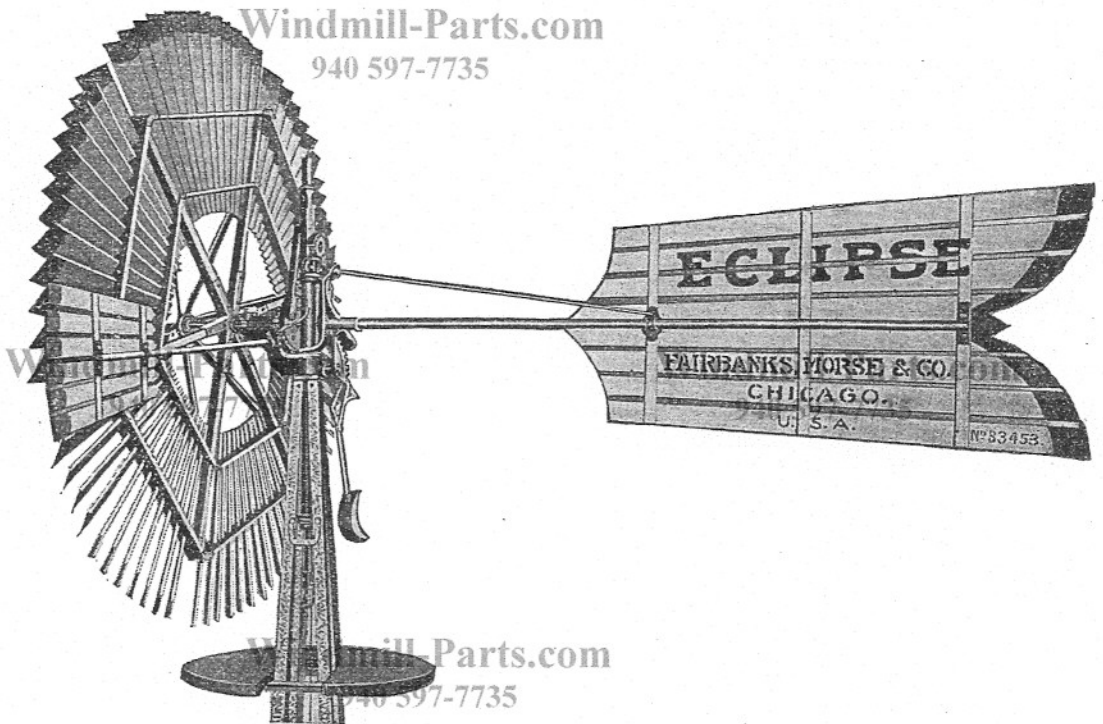


MADE IN THE FOLLOWING SIZES

Diameter Wind Wheel, Feet	Strokes, Inches	Weight Domestic, Pounds	Weight for Export, Pounds	Cubic Feet	Code Word.
10	4, 5, 7 and 8	500	679	49	Aciform
12	4, 5, 6, 7 and 8	700	951	70	Acinose
14	6, 7, 8 and 10	1050	1395	90	Acinus
16	6, 8 and 11	1535	1984	192	Ackard

Eclipse Standard Pumping Windmills are shipped fitted for a four-post wood tower. When so ordered they can be fitted for a single post mast, two-post mast, or Fairbanks-Morse steel towers, without extra charge. With the Windmill is shipped the tower collar and step casting, with all necessary bolts to fit mill on any of the above-mentioned towers; also wood pump pole sufficient for 40-foot or 50-foot tower, and connection for pump; but no tower or pump.

Windmill-Parts.com  
940 597-7735

Windmill-Parts.com  
940 597-7735

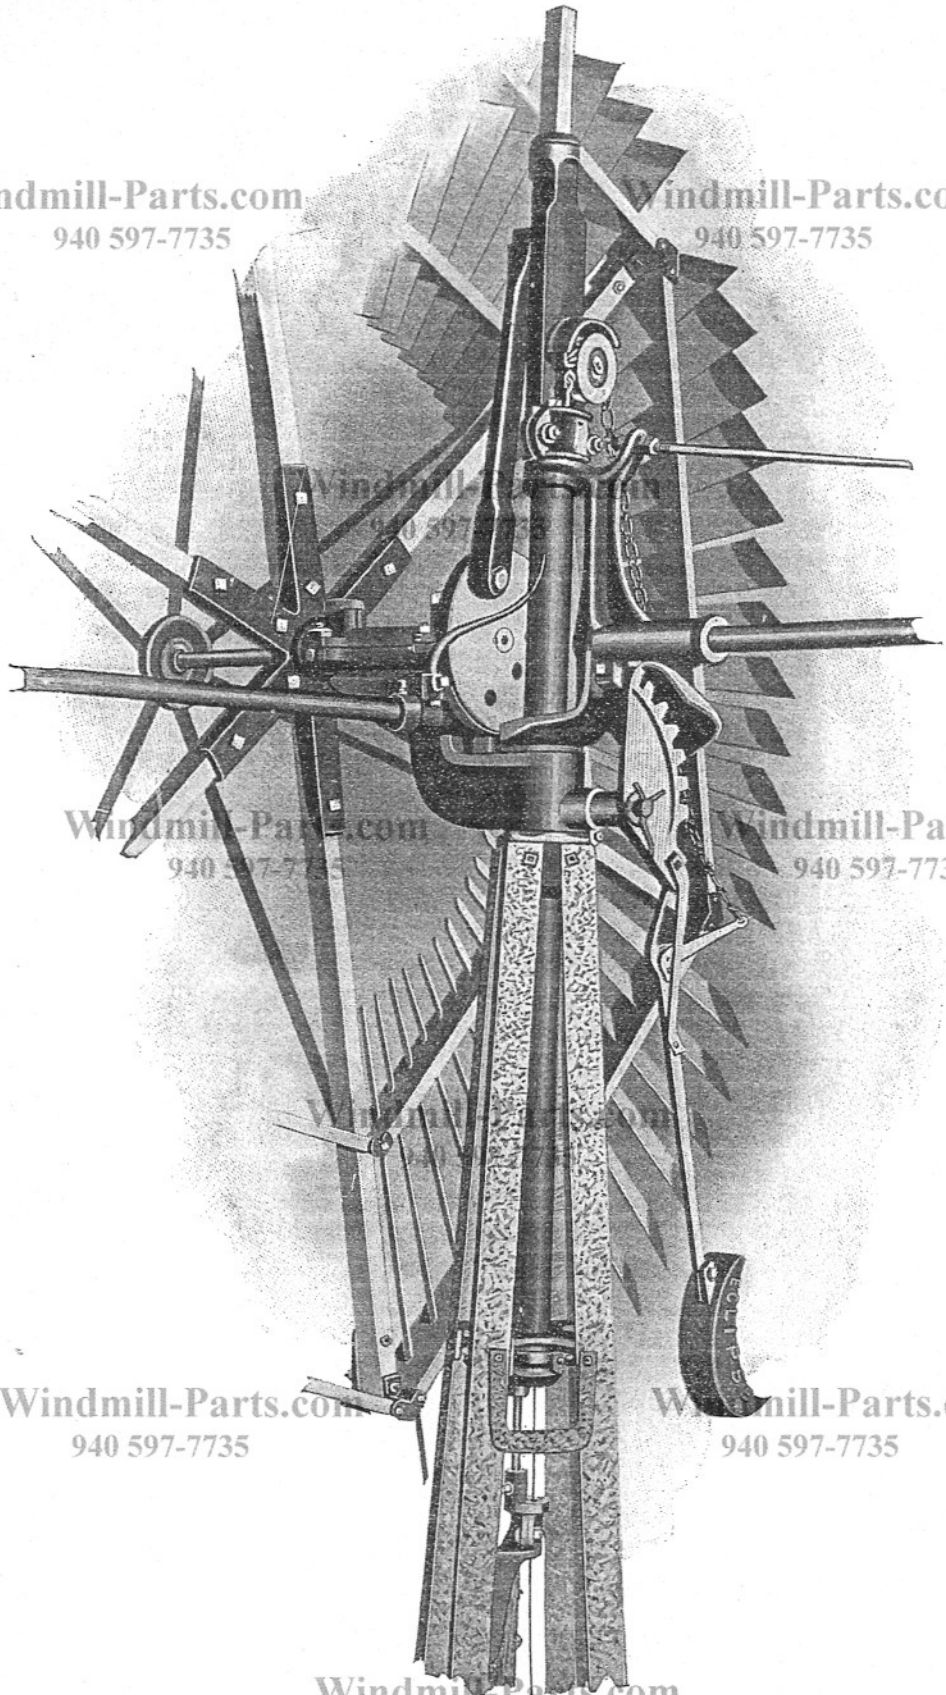

Windmill-Parts.com  
940 597-7735

Windmill-Parts.com  
940 597-7735

Windmill-Parts.com  
940 597-7735

Windmill-Parts.com  
940 597-7735

Windmill-Parts.com  
Detailed View of Working Parts

# Eclipse Farm Pumping Windmill