


REPAIR LIST FOR WINDMILL REGULATOR

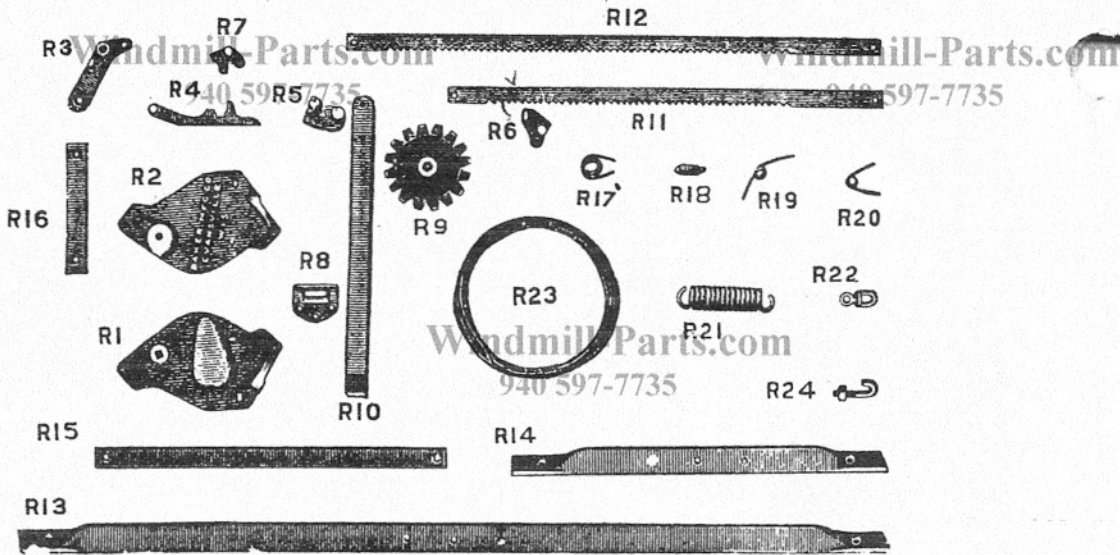

Windmill-Parts.com
940 597-7735

Windmill-Parts.com
940 597-7735

In ordering give both name and symbol of each part.

Name of Part	Sym- bol	Price	Weight	
			Lb.	Ozs.
Case	R1	\$3.85	3	8
Cover	R2	2.60	2	13
Float lever	R3	.80		8
Push-off	R4	.70		3
Push dog	R5	.70		3
Hold dog	R6	.70		3
Latch dog	R7	.70		3
Pump pole casting	R8	.35		6
Sprocket wheel	R9	2.00		10
Pump pole lever	R10	1.20	1	11
Rack for 13½ in. pull (3/8 x 3/4 x 24)	R11	4.55	1	11
Rack for 19½ in. pull (3/8 x 3/4 x 30½)	R12	5.15	2	3
Supporting angle 4-foot	R13	2.35		8
Supporting angle 24-5/8 inches	R14	1.20	1	13
Supporting angle 11-3/8 inches	R14½	1.20	1	13
Brace (1 x #12 x 19-3/8)	R15	.70		13
Float lever extension (1 x #12 x 9)	R16	.35		8
Float lever spring	R17	.70		2
Push dog spring	R18	.70		2
Hold dog spring	R19	.70		2
Latch spring	R20	.70		2
Wire spring	R21	1.20		11
Wire swivel	R22	.70		2
Wire (50 Ft. No. 16 galvanized)	R23	.70		11
Hook bolt (Hook Washer & 3/8x2½" Galv. Mach. bolt)	R24	.35		2
Weight (1 x 3/16 x 12 & cast wt.)	R26	1.50	2	11